


HAVE YOU EVER MEASURED

the consequences of using tapered pilots in your guides?

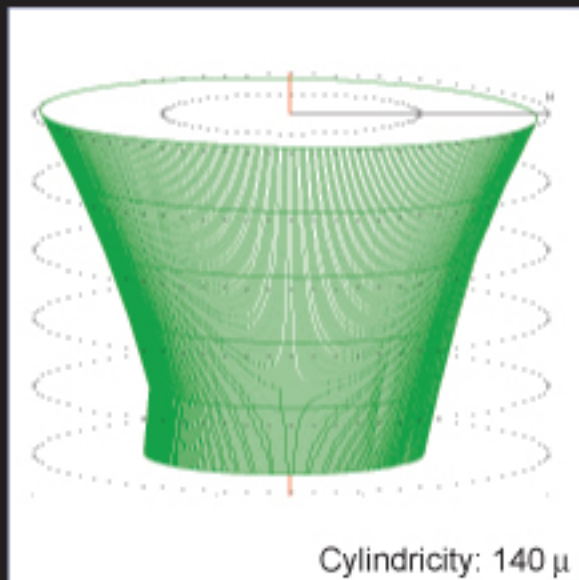


Cylindricity: 140 μ

140 μ = .140 mm = .0055"

**SUBSTANTIATED FACTS,
NOT UNSUBSTANTIATED CLAIMS**

HAVE YOU EVER MEASURED


the shape of a nice looking valve seat machined with a carbide form tip?

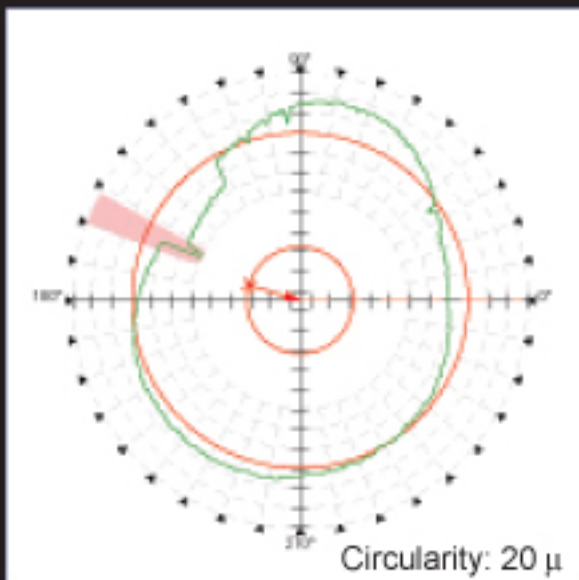

Circularity: 20 μ

20 μ = .020mm = .00079"

NEWEN **FIXED-TURNING**® a replacement technology

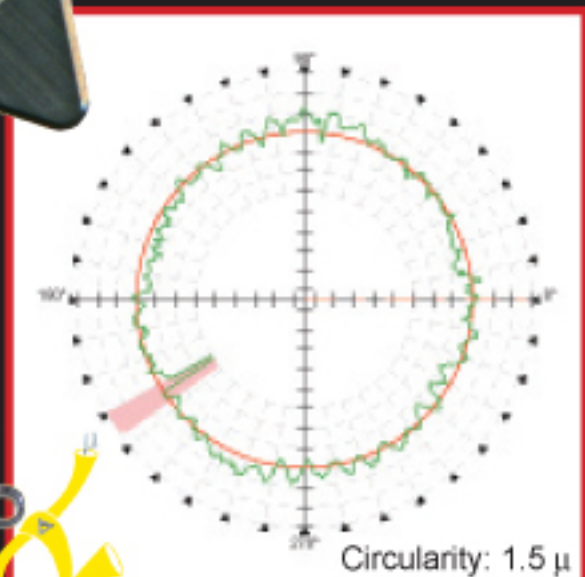

Circularity: 1.5 μ

1.5 μ = .0015mm = .000059"



Mr. PerfectSeat™

HAVE YOU EVER MEASURED

how beneficial FIXED-TURNING® could be to your Business :

Valve seats with form defects not exceeding 3 microns (.003mm/.00012"), no matter what valve seat material, valve seat diameter, valve seat profiles...

No Lapping Ever and No Chatter Ever...

Valve guides remain intact and much much more...

One single tool to do it all!

NEWEN

www.newen.com

1-800-639-3693



RACING • PERFORMANCE ENGINES • MACHINERY

INDIANAPOLIS, INDIANA

WED. AUG. 30 - THURS. AUG. 31 - FRI. SEPT. 1, 2006

BOOTH 915